BRAUN

SmartControl3

4835

Type 5745

www.braun.com/register

Braun Infolines

GB **0800 783 70 10**

IRL **1 800 509 448**

AUS **1 800 641 820**

Braun GmbH
Frankfurter Straße 145
61476 Kronberg / Germany

5-745-451/00/X-06
UK/AUS

1
F/C4000
2
3
3
4
5
6
7
washable
start • stop
SmartControl3 ultra
BRAUN

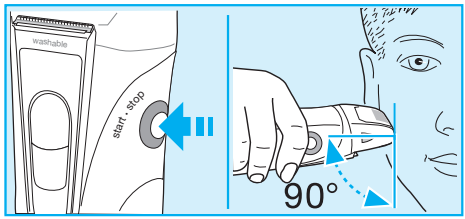
washable
start • stop
90°

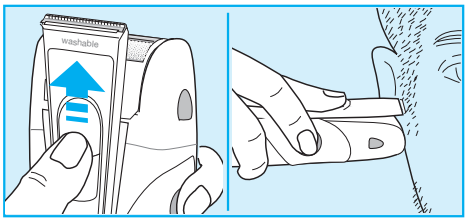
washable

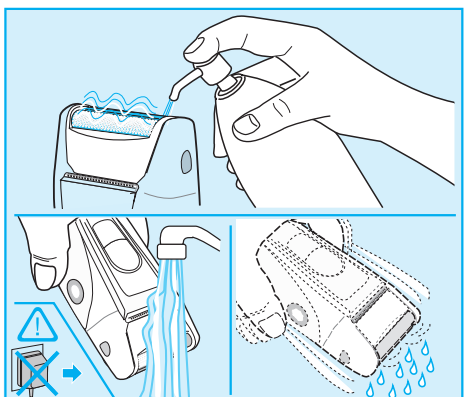

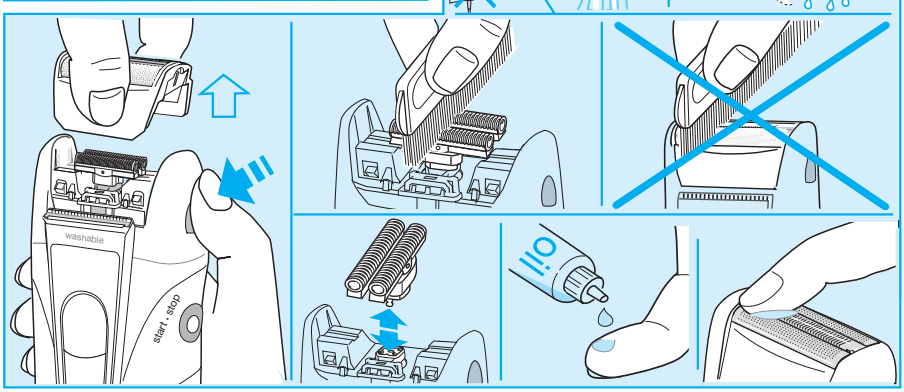
washable
start • stop

English

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun Shaver.

Warning
Your shaver is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise there is risk of electric shock.

Description

1 Shaver foil
2 Cutter block
3 Release button
4 On/off switch («start/stop»)
5 Long hair trimmer
6 Charging light (green)
7 Special cord set

Charging

The best environmental temperature for charging is between 15 °C and 35 °C.

- Connect the shaver to an electrical outlet with the motor switched off and charge it for at least 8 hours.
- The green charging light (6) shows that the shaver is being charged.
- Once the shaver is completely charged, discharge the shaver through normal use. Then recharge to full capacity.
- A full charge provides up to 30 minutes of cordless shaving time depending on your beard growth. However, the maximum battery capacity will only be reached after several charging/discharging cycles.

Shaving

Press the on/off switch (4) to turn the shaver on.

Trimmer:
When the long hair trimmer (5) is activated, it allows the controlled trimming of moustache or sideburns.

Tips for the perfect shave

- We recommend that you shave before washing, as the skin tends to be slightly swollen after washing.
- Hold the shaver at right angles (90°) to the skin. Stretch the skin and shave against the direction of beard growth.
- To maintain 100% shaving performance, replace the shaver foil and cutter block at least every 18 months or when worn.

Cleaning

This appliance is suitable for cleaning under an open water tap.
Warning: Detach the hand-held part from the power supply before cleaning it in water.

Regular cleaning ensures better shaving performance. Rinsing the shaving head after each shave under running water is an easy and fast way to keep it clean:

- Switch the shaver on (cordless) and rinse the shaving head under hot running water. A natural based soap may also be used provided it contains no particles or abrasive substances. Rinse off all foam and let the shaver run for a few more seconds.
- Next, switch off the shaver and press the release buttons. Remove the shaver foil and the cutter block. Then leave the disassembled shaving parts to dry.

Alternatively, you may clean the shaver using the brush provided:

- Switch off the shaver. Remove the shaver foil.
- Using the brush, clean the cutter block and the inner area of the shaver head. However, do not clean the shaver foil with the brush as this may damage the foil.

Keeping your shaver in top shape

If you regularly clean the shaver under water, then once a week apply a drop of light machine oil onto the long hair trimmer and shaver foil.

Preserving the batteries
In order to maintain the optimum capacity of the rechargeable batteries, the shaver has to be fully discharged (by shaving) every 6 months approximately. Then recharge the shaver to full capacity. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time.

Replacing the shaving parts
To maintain 100% shaving performance replace your foil and cutter block at least every 18 months or when worn. Change both parts at the same time for a closer shave with less skin irritation.
(Shaver foil and cutter block: 4000 series)

Environmental notice

This product contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.

Subject to change without notice.

This product conforms to the European Directives EMC 89/336/EEC and Low Voltage 73/23/EEC.

CE

For electric specifications, see printing on the special cord set.

For UK only:

Guarantee
We grant 2 years guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.
This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear and tear (e.g. shaver foil or cutter block) as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.

This guarantee in no way affects your rights under statutory law.

For Australia only:

Warranty
We grant a 24 Month Replacement Warranty on this appliance commencing on the date of purchase.

This warranty applies in all States and Territories of Australia and in New Zealand and is in addition to any mandatory statutory obligations imposed on Procter & Gamble Australia Pty. Ltd., its distributors and its manufacturer. This express warranty does not purport to exclude, restrict or modify any such mandatory statutory obligations.

This warranty only covers defects in the appliance resulting from faults in workmanship or materials. Therefore, if your appliance becomes faulty as a result of faults in workmanship or materials, it will be exchanged by your retailer, on presentation of proof of purchase.

This warranty only applies to domestic or household use of this appliance and the warranty will only apply if the correct operating instructions included with this product have been followed. The warranty on any appliance replaced under this warranty ends on the expiry of the warranty period that applied to the original appliance.

This warranty does not cover:

A. Damage arising from improper use or operation on incorrect voltages.
B. Breakages to shaver foils, glass jars, etc.
C. Normal wear due to moving parts.
D. Repairs undertaken by unauthorised service personnel or use of non genuine parts.
E. Appliances that are outside the warranty period or are not faulty.

This appliance is not intended for use by young children or infirm persons without

supervision. Young children should be supervised to ensure that they do not play with the appliance.

If the appliance is supplied from a cord extension set or electrical portable outlet device these should be positioned so they are not subject to splashing or ingress of moisture.

To the extent permitted by the laws of the Commonwealth of Australia and New Zealand and applicable laws of a State or Territory of Australia, and subject to the second paragraph of this warranty above, this warranty is given in exchange for any other rights you may have against Procter & Gamble Australia Pty. Ltd. or its distributors or manufacturer, whether at law, in tort (including negligence), in equity or under statute.

Please retain proof of purchase of this appliance. If you have any questions in relation to this warranty, please call our Consumer Service line (see below for numbers).

Repairs and service
If you are sending your appliance for repair, please pack the appliance adequately and send it to your nearest Service Agent. For service or replacement parts refer to the authorised Service Agents listed overleaf. Local Service Agents may change from time to time – in that event please contact the Consumer Service free call number below for updated local service agent details.

Australian Consumer Service (free call):
1 800 641 820

New Zealand Consumer Service (free call):
0 800 108 909

N2820

Australian & N.Z. Service Agents

VICTORIA & TASMANIA

State Wide Services Pty. Ltd.
17-19 Hossack Avenue
Coburg North, Vic 3058

Tel. (03) 8371 9100
Fax. (03) 9355 8644
Email: jaappliances@
statewideservices.com.au

QUEENSLAND

Brisbane Appliance Service Centre
Unit 1A, 55 Ipswich Road,
Woolloongabba, Qld. 4102
(P.O.Box 1247, Coorparoo,
Qld. 4151)

Tel. (07) 3391 0360
Fax. (07) 3391 0361

WESTERN AUSTRALIA

Mark 1 Appliances
Unit 1, 46 Abernethy Rd.,
Belmont, WA 6104

Tel. (08) 9475 0911
Fax. (08) 9475 0922

NEW SOUTH WALES & A.C.T.

Faulder Appliance Services
Shop 4, 9 Evans Road,
Rooty Hill, N.S.W. 2766

Tel. (02) 9625 3064
Fax. (02) 9625 3037

SOUTH AUSTRALIA & N.T.

Adelaide Service Centre
Shop B2,
Parkholme Shopping Centre,
319 Oaklands Rd.,
Parkholme, S. Aust. 5043

Tel. (08) 8357 5800
Fax. (08) 8357 5833

NEW ZEALAND

Key Service Ltd.
69 Druces Rd.,
Manakau City, Auckland, N.Z.

Tel. (09) 262 5838
Fax. (09) 262 5839